



**bumbleride**<sup>TM</sup>

PO Box 7851  
San Diego, California 92167

**bumbleride**<sup>TM</sup>

operating instructions

**flyer**  
2007

Warnings:

- ⚠ Care must be taken when folding and unfolding the stroller to prevent finger entrapment.
- ⚠ To avoid infant from falling or sliding out, always attach the footmuff and raise the footrest.
- ⚠ Always use safety harness and never leave children unattended.
- ⚠ Engage the rear foot brake when not holding your stroller.
- ⚠ When folding your stroller or making adjustments, make sure your children are clear of moving parts.
- ⚠ Never allow more than one child at a time in the stroller.
- ⚠ Never leave children in the stroller when using stairs or escalators.
- ⚠ Never overload the stroller. Stroller will become unstable if the manufacturer's recommended load is exceeded.
- ⚠ This stroller should open and close easily. Do not force it. Read operation instructions.
- ⚠ Do not leave stroller exposed to heat for long periods of time.
- ⚠ Do not fold your stroller when wet.
- ⚠ Parcels and/or accessory items placed in the unit may cause the unit to become unstable.
- ⚠ Unstable hazardous conditions may exist if accessories/attachments other than BumbleRide products are added to this stroller.
- ⚠ Do not hang shopping bags from the handle as this may affect the stroller's stability. Always use the basket provided. The maximum weight in the basket is 12lbs.

Maintenance:

- This stroller requires regular maintenance. Regularly check for loose rivets, loose screws and broken parts, etc. Check all safety devices and brakes to ensure safety.
- Clean and lubricate the stroller frame and moving parts.
- The removable seat and bumper fabric can be machine washed using cold water. The canopy can be spot washed. Do not use a dryer machine to dry fabric.

The weight capacity of this stroller is 40lbs.

As a part of continuous product development, BumbleRide reserves the right to make design changes without notice or obligation.

**bumbleride.**

PO Box 7851, San Diego, CA 92167 p.619-523-5422 f.619-615-2065  
email: info@bumbleride.com  
www.bumbleride.com


warranty card

name \_\_\_\_\_  
address \_\_\_\_\_  
\_\_\_\_\_ phone \_\_\_\_\_ e-mail \_\_\_\_\_  
model name \_\_\_\_\_ date of purchase \_\_\_\_\_  
retailer/website \_\_\_\_\_  
your child/children's date(s) of birth \_\_\_\_\_  
due date (if expecting) \_\_\_\_\_  
your birthdate \_\_\_\_\_  
how do you like your bumbleride? why did you choose us? \_\_\_\_\_  
\_\_\_\_\_  
\_\_\_\_\_  
\_\_\_\_\_

\*please attach proof of purchase

#### RÉGLAGE DU DOSSIER :

- Pour abaisser le dossier, tirer sur le levier situé à l'arrière du dossier jusqu'à la position souhaitée (15). Pour relever le dossier, le pousser simplement vers le haut.

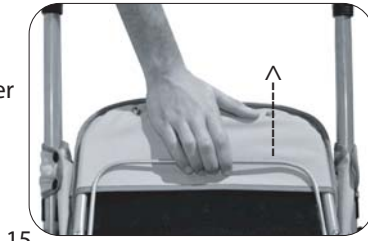

#### RÉGLAGE DE LA POSITION DU GUIDON :

- Appuyer sur les boutons situés de chaque côté du guidon pour le mettre dans la position souhaitée (16).



#### INVERSION DU GUIDON :

- Tirer les poignées deux côtés vers le haut et pousser le guidon dans la direction opposée jusqu'à ce qu'il s'enclenche (17)



#### PLIAGE DE LA POUSETTE :

- Engager le frein à pied arrière.
- Abaisser entièrement le dossier.
- Veiller à ce que la roue avant soit en position pivotante déverrouillée.
- Relever le guidon s'il est abaissé.
- Saisir les deux poignées et appuyer sur les deux boutons gris pour déverrouiller. Plier la poussette vers le sol (18).
- Veiller à ce que le système de verrouillage soit enclenché (19).



AVERTISSEMENT : Les bébés peuvent glisser dans l'ouverture pour les jambes et se blesser.  
AVERTISSEMENT : Ne jamais utiliser en position allongée sans avoir fixé au préalable le PROTÈGE-PIED ou avoir redressé complètement le repose-pied.

#### Safety Standard:

- This product is manufactured in compliance with ASTM F833 Standard Consumer Safety Performance Specifications for carriages/strollers.

#### Limited Warranty:

Bumblerride Inc. ("Bumblerride") guarantees its products, when owned by the original customer to be free from defects in materials and or defects caused by workmanship for one year from the original date of purchase. THE WARRANTY CARD MUST BE RETURNED WITH PROOF OF PURCHASE IN ORDER TO ACTIVATE THE WARRANTY PERIOD.

This warranty does not cover damage caused by normal wear and tear, neglect, accidents, lack of maintenance or damage caused by parts not manufactured by Bumblerride Inc.

All warranty claims must be made directly to the authorized retailer from whom the product was purchased. All costs associated with shipping and handling is the responsibility of the customer. Upon receipt of the product, Bumblerride Inc. or its authorized repair center will arrange for inspection of the item. If the problem is due to defective parts or defective workmanship on behalf of Bumblerride Inc., Bumblerride will repair or replace the product at Bumblerride's option. If the product is not covered under the warranty, the customer will be responsible for all expenses associated with the service provided.

**bumblerride.**

PO Box 7851, San Diego, CA 92167 p.619-523-5422 f.619-615-2065

email: [info@bumblerride.com](mailto:info@bumblerride.com)

[www.bumblerride.com](http://www.bumblerride.com)

⚠ **IMPORTANT:** For the safety of your child, please read these safety instructions before using your stroller.

⚠ **WARNING:** When assembling the stroller, ensure children are at a safe distance away.

**PLEASE NOTE THE CONTENTS OF YOUR FLYER:**

Flyer frame, (4) Flyer wheel assemblies, (1) set of Bumbleride fabric (includes main seat, canopy, foot muff, bumper bar), (1) cup holder, (1) infant carrier adapter bar, (1) safety belt for infant carrier.

**OPENING STROLLER:**

- Release the gray lock clip (1).
- Pull handlebar upward and spread front legs forward until both sides lock into position (2).



1



2

**ASSEMBLING WHEELS:**

- Slide each wheel onto each leg of the stroller until it locks into place (3).

**LOCKING WHEELS:**

- Press down on the lock bar to ensure each set of wheels are locked into place (4).
- To unlock simply lift up on the lock bar.

**PLEASE NOTE:** No matter which position the handle is in, always make sure that the wheels closest to your feet remained locked at all times.



3



4

**FIXATION DE L'ADAPTATEUR DE SIÈGE-AUTO :**

- Ôter la barre de retenue et insérer la barre du siège auto. Le dos du siège auto doit se trouver contre la barre de l'adaptateur (11). Connecter la ceinture de sécurité à chaque anneau en D des deux côtés du harnais de siège.

**AVERTISSEMENT :** Certains sièges-autos ne sont pas compatibles avec cette poussette. Pour vérifier si votre siège-auto est compatible avec cette poussette, l'installer sans y mettre l'enfant. Toujours veiller à ce que la ceinture de retenue secondaire soit bien fixée au-dessus du siège-auto avant utilisation.

11



**RÉGLAGE DU REPOSE-PIED :**

- Pour monter le repose-pied, le tirer simplement vers le haut jusqu'à la position souhaitée (12).
- Pour abaisser le repose-pied, tirer simultanément sur les leviers correspondants sous le repose-pied.


12



**UTILISATION DE VOTRE HARNAIS :**

- Insérer les parties A et B de la boucle sur les côtés de la partie centrale C jusqu'à ce qu'elles s'enclenchent bien (13).
- Régler soigneusement les sangles du harnais pour qu'elles soient très ajustées à l'aide des boucles de tension (D) situées sur toutes les bretelles, les sangles abdominales et la sangle d'entrejambes.

13

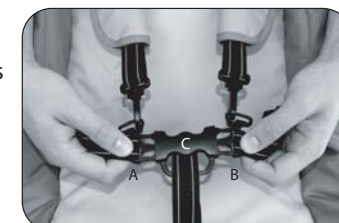

**OUVERTURE DE VOTRE HARNAIS :**

- Ouvrir les boucles en appuyant simultanément sur les griffes supérieures et inférieures et en tirant.
- AVERTISSEMENT :** Éviter les blessures graves liées aux chutes ou glissements. Toujours boucler la ceinture.

14




**FONCTIONNEMENT DU FREIN :**

- Engager les freins en appuyant sur les leviers de frein à l'aide du pied. Vérifier qu'ils sont correctement enclenchés (14).
- Veiller à ce que le frein soit engagé lorsque la poussette n'est pas tenue.
- Désengager en relevant les leviers à l'aide du pied.

#### FIXATION DU TISSU :

- Mettre le dossier en position droite et glisser le panneau arrière du tissu du siège sur le dossier (5).
- Localiser les sangles en velcro inférieures au dos du tissu du siège et les fixer autour du dossier de la poussette (6).
- Localiser les sangles en velcro sur l'envers de l'assise du tissu du siège et les fixer sous le cadre de l'assise de la poussette (7).
- Abaisser entièrement le dossier et fixer le bouton-pression C à sa partie correspondante à l'intérieur du guidon. Plier le bouton-pression A au-dessus du guidon et les fixer aux bouton-pression B (8).

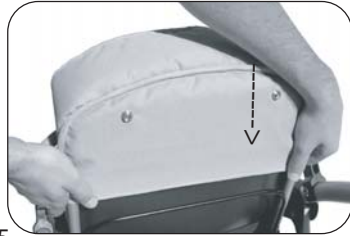


5



6




7

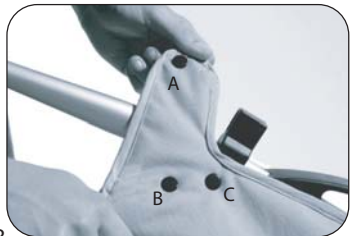

8

#### FIXATION DU PROTÈGE-PIED :


- Soulever le tissu du repose-pied pour localiser la fermeture éclair. Fixer le protège-pied sur le tissu du repose-pied à l'aide de la fermeture éclair et fixer les boutons-pression sur l'assise du tissu du siège.

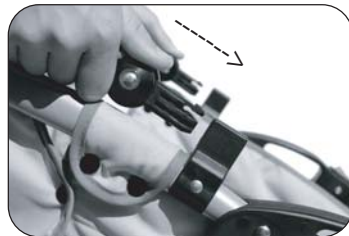

9

#### FIXATION DE LA CAPOTE :

- Insérer chaque extrémité de la capote dans les supports en plastique situés de chaque côté du cadre (9).
- Fixer la capote à l'aide des boutons-pression.
- Pour l'ôter, appuyer sur les clips en plastique aux deux extrémités et tirer.

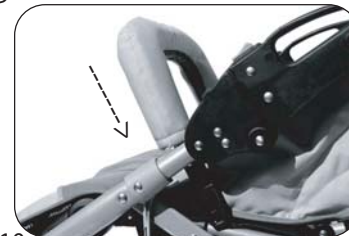

10

#### FIXATION DE LA BARRE DE RETENUE :

- Insérer la barre de retenue dans les supports en plastique de chaque côté du siège (10). Pour l'ôter, appuyer sur les clips de chaque côté de la barre de retenue et tirer.

#### ATTACHING FABRIC:

- Raise backrest to the upright position and slide back panel of seat fabric onto the backrest (5).
- Find lower backrest velcro straps on the back side of the seat fabric and secure them around the stroller backrest (6).
- Find seat velcro straps on the underside of the seat fabric and secure them under the seat of the stroller (7).
- Fully recline the backrest by pulling up on the black bar behind the backrest and attach snap C to the corresponding snap inside the handle bar. Fold snap A over the handle bar and attach to snap B (8).




5



6




7

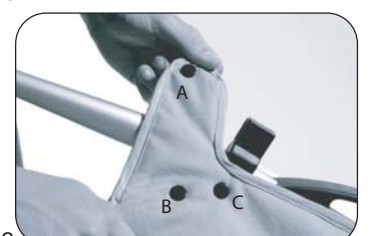

8

#### ATTACHING FOOT MUFF:


- Lift foot rest fabric to locate zipper. Zip the foot muff onto the foot rest fabric and attach press snaps to seat fabric.

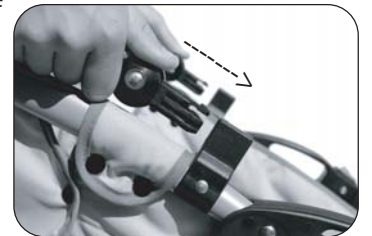

9

#### ATTACHING CANOPY:

- Insert each end of canopy into the plastic holders located on either side of the frame (9).
- Secure canopy with press snaps.
- To remove, squeeze clips on both ends and pull.

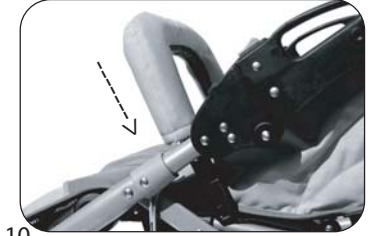

10

#### ATTACHING FRONT BUMPER:

- Insert front bumper onto plastic holders on either side of the seat (10). To remove, press clips on each side of bumper bar and pull out.

#### ATTACHING INFANT SEAT ADAPTER:

- Remove the bumper bar and install the infant seat bar. The back of the car seat should rest along the infant bar (11). Connect the safety belt strap to each D-ring on either side of the seat harness. Bring the belt over the car seat, buckle and tighten.

**WARNING:** Some infant carriers will not be compatible with this stroller. To verify whether your infant carrier is compatible with this stroller, install the carrier without your child in the carrier. Always ensure that the secondary strap is securely fastened over the infant carrier before use.



11

#### ADJUSTING FOOTREST:


- Simply lift the footrest to adjust to a horizontal position (12).
- To lower the footrest, simply pull on the corresponding levers beneath the foot rest simultaneously and lower to the desired position.



12

#### USING YOUR HARNESS:

- Insert buckle A and B into either side of the buckle housing C until they click into place securely (13).
- Carefully adjust the harness straps to snugly fit your child by adjusting the sliders (D) located on all shoulder straps, waist straps and the central front strap.

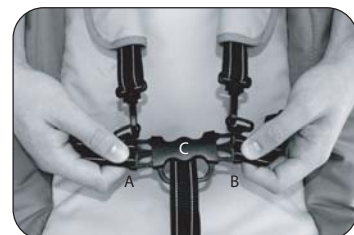

13

#### OPENING YOUR HARNESS:

- Release the buckle prongs, squeeze on the top and bottom prongs simultaneously and pull apart from the buckle housing.

**WARNING:** Avoid serious injury from falling or sliding out. Always use seat belt.



14

#### OPERATING BRAKE:

- Apply brakes by pushing down brake levers with foot. Make sure they are securely locked in place (14).
- Ensure brakes are applied when parking the stroller.
- Release by lifting levers with foot.

**⚠ IMPORTANT :** Pour la sécurité de votre enfant, veuillez lire attentivement ces instructions avant d'utiliser votre poussette.

**⚠ AVERTISSEMENT :** Lors du montage de la poussette, veiller à ce que les enfants se tiennent à une distance raisonnable.

#### OUVERTURE DE LA POUSSETTE :

- Dégager le clip de verrouillage gris (1).
- Tirer le guidon vers le haut et écarter les pieds avant vers l'avant jusqu'à ce que les deux côtés s'enclenchent (2).



1



2

#### MONTAGE DES ROUES :

- Glisser chaque roue sur chaque pied de la poussette jusqu'à ce qu'elle s'enclenche (3).

#### VERROUILLAGE DES ROUES :

- Appuyer sur la barre de verrouillage pour s'assurer que chaque jeu de roues est verrouillé (4).
- Pour déverrouiller, soulever simplement la barre de verrouillage.



3



4

### Avertissements:

- ⚠ Le soin doit être pris en pliant et dépliant le promeneur pour empêcher le piège de doigt.
- ⚠ Pour éviter le bébé de tomber ou du glissement hors, toujours attacher le footmuff et élever le repose-pied.
- ⚠ Toujours utiliser le harnais de sécurité et ne jamais laisser les enfants sans surveillance.
- ⚠ Enfoncer le frein à pied arrière lorsque la poussette n'est pas tenue.
- ⚠ Pendant le pliage ou le réglage de la poussette, s'assurer que les enfants sont éloignés des pièces mobiles.
- ⚠ Ne jamais laisser plus d'un enfant à la fois monter dans la poussette.
- ⚠ Ne jamais laisser d'enfants dans la poussette dans les escaliers ou les escalators.
- ⚠ Ne jamais surcharger la poussette qui deviendrait instable si la charge recommandée par le fabricant était excédée.
- ⚠ Cette poussette doit s'ouvrir et se fermer facilement. Ne pas forcer. Lire le mode d'emploi.
- ⚠ Ne pas laisser la poussette exposée à la chaleur pendant de longues périodes.
- ⚠ Ne pas fermer la poussette lorsqu'elle est mouillée.
- ⚠ Les paquets et/ou accessoires placés dans la poussette peuvent la rendre instable.
- ⚠ L'utilisation d'accessoires sur cette poussette autres que les produits BumbleRide peut entraîner une instabilité dangereuse.
- ⚠ Ne pas accrocher de sacs de course à la poignée car cela peut affecter la stabilité de la poussette. Toujours utiliser le panier prévu à cet effet. La charge maximale du panier est de 5 kg.

### Entretien:

- Cette poussette demande un entretien régulier. Vérifier régulièrement qu'il n'y a pas de rivets ou de vis desserrés, de pièces cassées, etc. Vérifier tous les mécanismes de sécurité et les freins pour assurer la sécurité.
- Nettoyer et lubrifier le cadre de la poussette et les pièces mobiles.
- Le siège et le tour de poussette en tissu amovibles peuvent être lavés en machine à l'eau froide. Frotter les taches de la capote si nécessaire. Ne pas passer au sèche-linge.

La charge maximale de cette poussette est de 18 kg (40 livres).

Dans le cadre du développement continu du produit, BumbleRide se réserve le droit d'apporter des modifications de conception sans préavis ou obligation

### Norme de sécurité :

- Ce produit est fabriqué en conformité avec les spécifications de sécurité des consommateurs de la norme ASTM F833 pour les landaus/poussettes.

### ADJUSTING BACKREST:

- To lower the backrest, lift the lever on the rear of the backrest to adjust to the desired position (15). To raise, simply push backrest up.



15

### ADJUSTING HANDLE POSITION:

- Press the buttons on both side of the handle to adjust to the desired position (16).



16

### REVERSING HANDLEBAR:

- Pull up the finger grips on both sides and push handlebar to the opposite position until it clicks into place (17).



17

### FOLDING STROLLER:

- Apply the rear foot brakes
- Ensure front wheels are locked in the outward facing position.
- Fully recline the backrest.
- Raise the handle if lowered.




18

- Grasp both handle grips and press both gray buttons to release locks. Fold the stroller towards the ground (18).
- Ensure that the lock is in its secured position (19).



19

**WARNING:** Never use in reclined carriage position unless the **BOOT COVER** is attached or the foot rest is raised to its fully upright position.

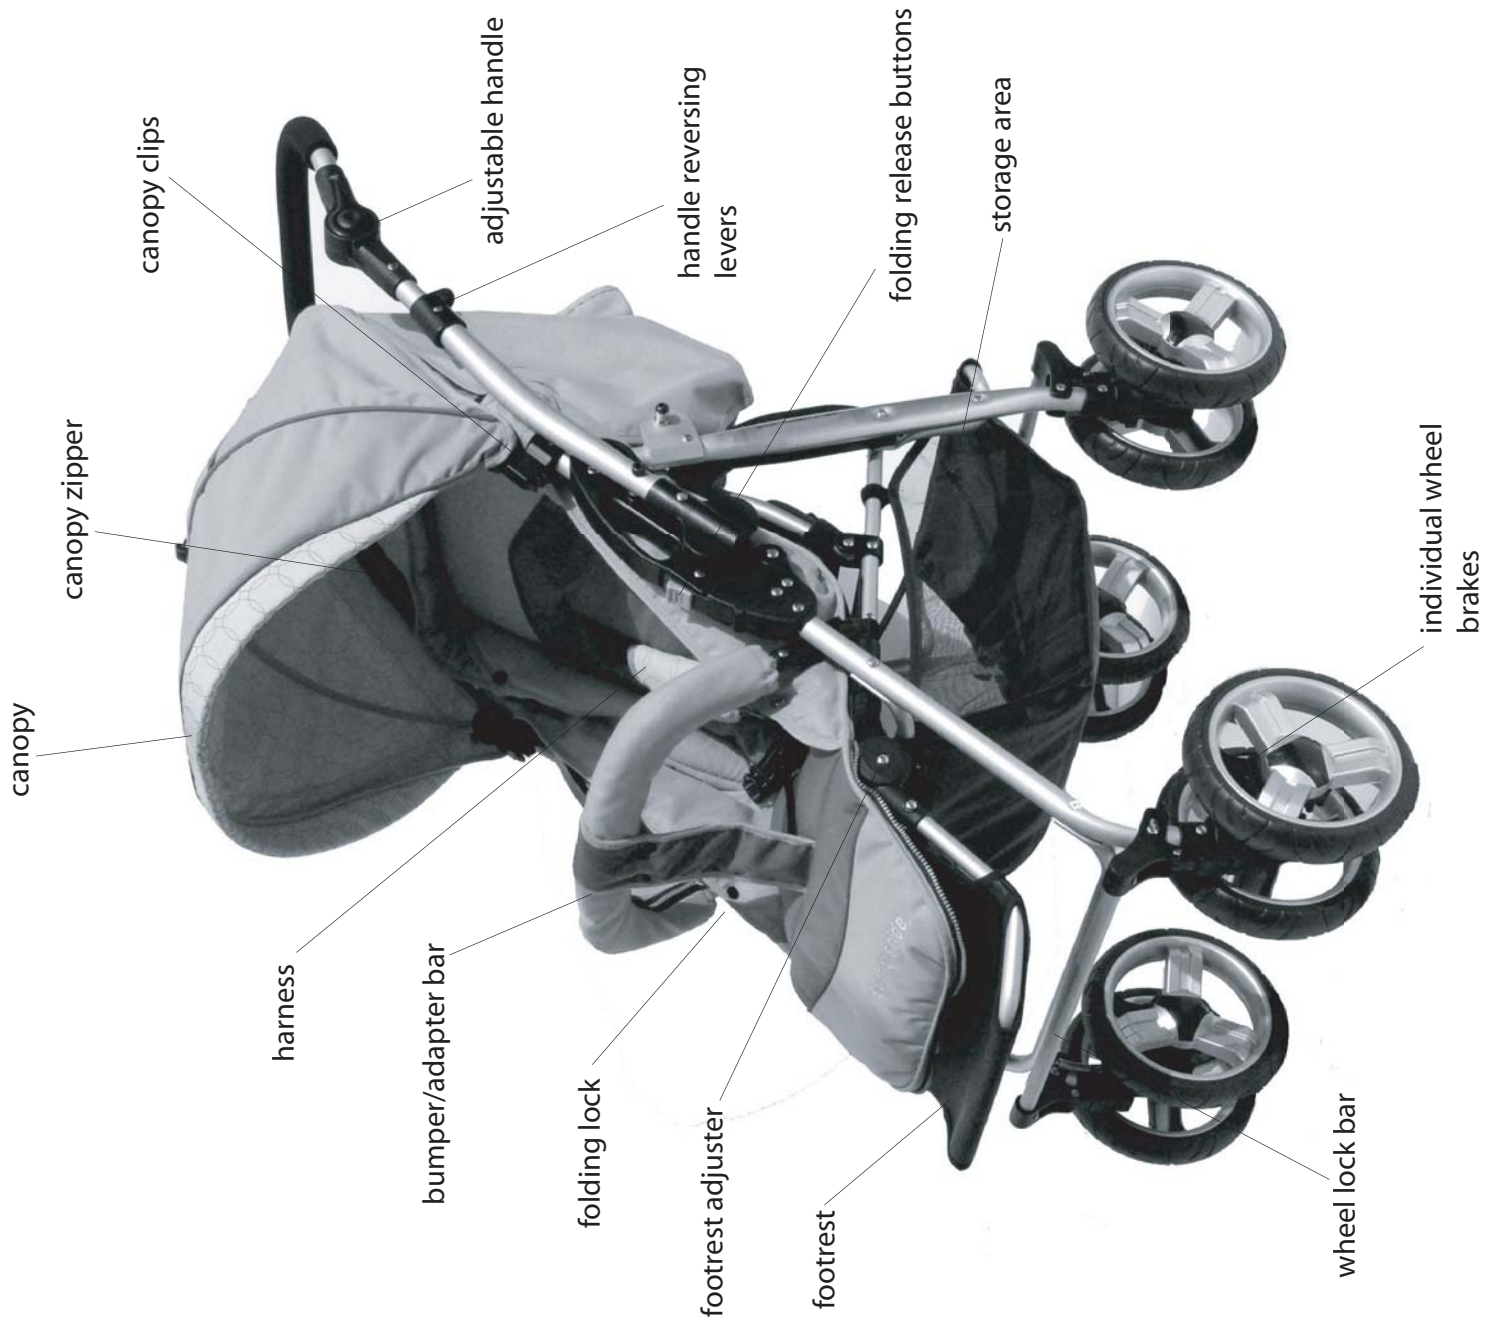

canopy

canopy zipper

canopy clips

harness

bumper/adaptor bar

adjustable handle

folding lock

handle reversing levers

footrest adjuster

footrest

folding release buttons

storage area

wheel lock bar

individual wheel brakes