

bumbleride | the ride of your life

Flyer

IMPORTANT SAFETY INSTRUCTIONS

When using this stroller, basic precautions should always be followed. Please note the following:

READ ALL INSTRUCTIONS BEFORE USING THIS STROLLER.

WHEN ASSEMBLING THIS STROLLER, ENSURE CHILDREN ARE A SAFE DISTANCE AWAY.

SAVE THIS OPERATING MANUAL

Keep this manual available for future reference.

WARNINGS

- 1 Care must be taken when folding and unfolding the stroller to prevent finger entrapment.
- 2 To avoid infant falling or sliding out, always attach the footmuff and/or raise the footrest.
- 3 Always use the safety harness and never leave children unattended while seated in stroller.
- 4 Engage the rear foot brake when not holding your stroller.
- 5 When folding your stroller or making any adjustments, make sure your children are clear of moving parts.
- 6 Never allow more than one child in the stroller.
- 7 Never leave children in the stroller when using stairs or escalators.
- 8 Never overload the stroller. The stroller will become unstable if the manufacturer's recommended load is exceeded.
- 9 This stroller should open and close easily. Do not force it. Please read operating instructions before operating the fold of this stroller.
- 10 Do not leave stroller exposed to heat for long periods of time.
- 11 Do not fold your stroller when it is wet.
- 12 Parcels and/or accessory items placed in the unit may cause the unit to become unstable.
- 13 Unstable and/or hazardous conditions may exist if accessories/attachments other than those manufactured by Bumbleride are added to this stroller.
- 14 Do not hang shopping bags from the handle as this may affect the stroller's stability. Always use the lower basket provided. The maximum weight capacity of the basket is 12 lbs.

MAINTENANCE

This stroller requires regular maintenance. Regularly check for loose rivets, loose screws and/or broken parts, etc. Check all safety devices and brakes to ensure all are functioning properly.

Clean and lubricate the stroller frame and moving parts.

The removable seat fabric can be machine-washed using cold water. The canopy fabric can be spot cleaned. DO NOT machine-dry the fabric.

The weight capacity of this stroller is 45 lbs.

As part of continuous product development, Bumbleride reserves the right to make design changes without notice or obligation.

SAFETY STANDARD

This product is manufactured in compliance with ASTM F833-07
Standard Consumer Safety Performance Specifications for carriages/strollers.

LIMITED WARRANTY

Bumblerride Inc. ("Bumblerride") guarantees its products, when owned by the original customer, to be free from defects in materials and/or defects caused by workmanship for one year from the original date of purchase. THE WARRANTY CARD MUST BE RETURNED WITH PROOF OF PURCHASE IN ORDER TO ACTIVATE THE WARRANTY PERIOD.

You may also register your stroller online at www.bumblerride.com.

This warranty does not cover damage caused by normal wear and tear, neglect, accidents, lack of maintenance or damage caused by parts not manufactured by Bumblerride.

All warranty claims must be made directly to the authorized retailer from whom the product was purchased. All costs associated with shipping and handling are the responsibility of the customer. Upon receipt of the product, Bumblerride or its authorized repair center, will arrange for inspection of the item. If the problem is due to defective parts or defective workmanship on behalf of Bumblerride, Bumblerride will repair or replace the product at Bumblerride's option. If the product is not covered under the original warranty, the customer will be responsible for all expenses associated with the service provided.

OPERATING MANUAL CONTENTS

- 1 Important Safety Instructions
- 1 Warnings
- 2 Safety Standards
- 2 Limited Warranty
- 3 Box Contents
- 4 Opening Chassis
- 4 Assembling Wheels
- 4 Locking Wheels
- 5 Attaching Canopy
- 5 Attaching Bumper Bar
- 6 Attaching Infant Seat Adapter Bar
- 6 Adjusting Footrest
- 6 Using the Seat Harness
- 7 Operating Brakes
- 7 Adjusting Backrest Position
- 7 Adjusting Handle Height
- 8 Reversing Handlebar
- 8 Attaching Accessory Cup Holder
- 9 Attaching Optional Rain Cover
- 9 Folding Your Stroller
- 10 Stroller Diagram


BOX CONTENTS



OPENING CHASSIS

Release the gray locking clip [1].

Pull handlebar upward and spread front legs forward until both sides lock into position [2].

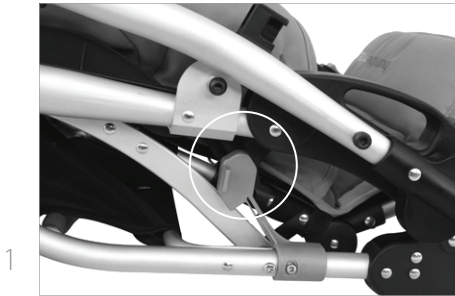

ASSEMBLING WHEELS

Slide each wheel onto each leg of the stroller until it locks into place [3].

LOCKING WHEELS

Press down on the lock bar to ensure each set of wheels is locked into place [4].
To unlock the wheels simply lift upward on the lock bar.



PLEASE NOTE: No matter which position the handle is in, always make sure that the wheels closest to your feet remain locked at all times.

ATTACHING CANOPY

Insert each end of the canopy into the plastic holders located on either side of the frame. Secure the canopy with the press snaps. To remove the canopy, squeeze the clips on both ends and pull.



ATTACHING BUMPER BAR


Insert front bumper into plastic holders on either side of the seat. To remove the bumper bar, press the clips on each side of the bar and pull out.



ATTACHING INFANT SEAT ADAPTER BAR

Remove the bumper bar and install the infant seat adapter bar. The back of the infant seat should rest along the infant adapter bar [1]. Connect the safety belt strap to each plastic D-ring on either side of the seat harness. Bring the belt over the infant seat. Buckle and tighten the strap [2].

WARNING: Some infant carriers will not be compatible with this stroller. To verify whether your infant carrier is compatible with this stroller, please install the carrier without your child inside. Always ensure that the secondary safety belt is securely fastened over the infant carrier before use.

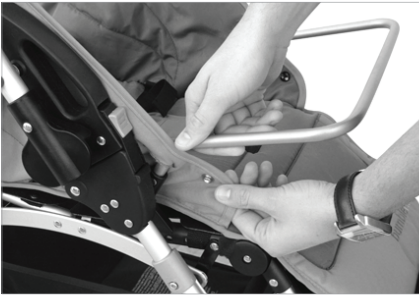

1



2

ADJUSTING FOOTREST

Simply lift the footrest to adjust to a horizontal position [3]. To lower the footrest, simply pull on the corresponding levers beneath the footrest simultaneously and lower to the desired position.


USING THE SEAT HARNESS

Insert buckles [A] and [B] into either side of the buckle housing [C] until they click into place securely. Carefully adjust the harness straps to snugly fit your child by adjusting the sliders located on the shoulder straps, waist straps and the central front strap. To open the harness, squeeze the buckle prongs and pull away from the buckle housing [C].

WARNING: ALWAYS USE SAFETY HARNESS WHEN CHILD IS SEATED IN THE STROLLER.



3

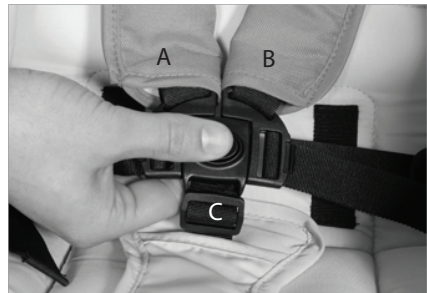

4

OPERATING BRAKES

Apply the brakes by pushing down with your foot. Make sure that the brakes are securely locked in place [1].

Ensure that the brakes are engaged when parking the stroller.

Release the brakes by lifting with your foot.



ADJUSTING BACKREST POSITION

This stroller utilizes a four position backrest. To lower the backrest, lift the lever on the rear of the backrest to adjust to the desired position.

To raise, simply push the backrest up until it engages in the desired position [2].



ADJUSTING HANDLE HEIGHT

Press the handle buttons on either end of the handle simultaneously and lower or raise the handle height [3].



REVERSING HANDLEBAR

Pull up the finger grips on both sides of the handle and push handle into the opposite position until it clicks into place.



ATTACHING ACCESSORY CUP HOLDER


Locate a small dime-sized steel knob on the right side of the stroller handle.

Press the plastic cup holder onto the knob and pull downward so that the cup holder locks into place.



ATTACHING ACCESSORY RAIN COVER

Begin by unfolding the packaged rain cover and placing it over your Bumbleride. Pull the upper flap through the handle opening. Notice the Velcro attachments on both sides of the flap. Secure the Velcro attachments found on the upper flap to the corresponding attachments on the side walls of the rain cover. Secure the Velcro loops around the front portion of the frame.

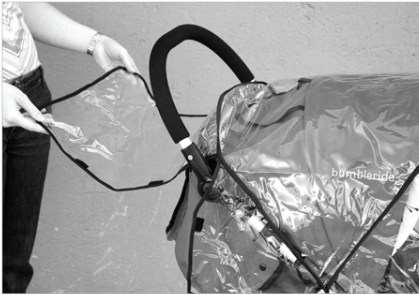

FOLDING STROLLER

Apply the rear foot brakes and ensure the front wheels are locked in the outward facing position.

Fully recline the backrest and raise the handle if lowered.

Grasp both handle grips and press both gray buttons to release locks [1].
Fold the stroller towards the ground.

Ensure that the lock is in its secured position [2].



WARNING: Never use in reclined carriage position unless the footmuff is attached or the footrest is raised to its fully upright position.

STROLLER DIAGRAM



IMPORTANTES INSTRUCTIONS DE SÉCURITÉ CONSERVEZ CETTE NOTICE D'UTILISATION

Il est important de respecter les mesures de précaution de base lorsque vous utilisez cette poussette. Veuillez lire attentivement ce qui suit :

Conservez cette notice d'utilisation pour vous y référer ultérieurement.

LISEZ TOUTES LES INSTRUCTIONS AVANT D'UTILISER LA POUSSETTE.

LORSQUE VOUS ASSEMBLEZ CETTE POUSSETTE, ASSUREZ-VOUS QU'IL N'Y AIT PAS D'ENFANT À PROXIMITÉ IMMÉDIATE.

AVERTISSEMENTS

- 1 Le soin doit être pris en pliant et dépliant le promeneur pour empêcher le piège de doigt.
- 2 Pour éviter le bébé de tomber ou du glissement hors, toujours attacher le footmuff et élever le repose-pied.
- 3 Toujours utiliser le harnais de sécurité et ne jamais laisser les enfants sans surveillance.
- 4 Enfoncez le frein à pied arrière lorsque la poussette n'est pas tenue.
- 5 Pendant le pliage ou le réglage de la poussette, s'assurer que les enfants sont éloignés des pièces mobiles.
- 6 Ne jamais laisser plus d'un enfant à la fois monter dans la poussette.
- 7 Ne jamais laisser d'enfants dans la poussette dans les escaliers ou les escalators.
- 8 Ne jamais surcharger la poussette qui deviendrait instable si la charge recommandée par le fabricant était excédée.
- 9 Cette poussette doit s'ouvrir et se fermer facilement. Ne pas forcer. Lire le mode d'emploi.
- 10 Ne pas laisser la poussette exposée à la chaleur pendant de longues périodes.
- 11 Ne pas fermer la poussette lorsqu'elle est mouillée.
- 12 Les paquets et/ou accessoires placés dans la poussette peuvent la rendre instable.
- 13 L'utilisation d'accessoires sur cette poussette autres que les produits Bumbleride peut entraîner une instabilité dangereuse.
- 14 Ne pas accrocher de sacs de course à la poignée car cela peut affecter la stabilité de la poussette. Toujours utiliser le panier prévu à cet effet. La charge maximale du panier est de 5 kg.

ENTRETIEN

Cette poussette demande un entretien régulier. Vérifier régulièrement qu'il n'y a pas de rivets ou de vis desserrés, de pièces cassées, etc. Vérifier tous les mécanismes de sécurité et les freins pour assurer la sécurité. Nettoyer et lubrifier le cadre de la poussette et les pièces mobiles. Le siège et le tour de poussette en tissu amovibles peuvent être lavés en machine à l'eau froide. Frotter les taches de la capote si nécessaire. Ne pas passer au sèche-linge. La charge maximale de cette poussette est de 18 kg (40 livres). Dans le cadre du développement continu du produit, Bumbleride se réserve le droit d'apporter des modifications de conception sans préavis ou obligation

Norme de sécurité :

Ce produit est fabriqué en conformité avec les spécifications de sécurité des consommateurs de la norme ASTM F833 pour les landaus/poussettes.

NORME DE SÉCURITÉ

Ce produit est fabriqué d'accord avec ASTM F833-07
Standard Consumer Safety Performance Specifications pour les promeneurs.

This product complies with the Consumer Product Safety Improvement Act of 2008 (CPSIA).

LA GARANTIE QUI EST LIMITÉE

Bumblerride Inc. ("Bumblerride") garantit ses produits, quand possédés par le propriétaire original, pour être sans défauts de matière ou de construction depuis un an de la date originale d'achat

La carte de garantie doit être rendue avec la preuve d'achat pour activer la garantie. Vous pouvez aussi enregistrer votre promeneur par Internet à www.bumblerride.com

La garantie ne fait pas une demande au dommage provoqué par l'utilisation normale, la négligence, les accidents ou les produits non fabriqués par Bumblerride.

Toutes les revendications de garantie doivent être envoyées à votre détaillant autorisé. C'est la responsabilité du client de payer pour expédier des prix. Quand l'article arrive, Bumblerride prendra des dispositions pour ce que l'article est reconsidéré.

Si le problème est provoqué par les parties Bumblerride Inc. défectueuses., Bumblerride peut vouloir réparer ou remplacer l'article. Si l'article n'est pas protégé selon la garantie originale, le client sera responsable de tous les frais associés avec le service.

CONTENTUS D'INSTRUCTIONS

- 11 Importantes Instructions de securite
- 11 Avertissements
- 12 Normes de sécurité
- 12 La garantie qui est limitée
- 13 Contenus de la boîte
- 14 Ouverture de la poussette
- 14 Montage des roues
- 14 Verrouillage des roues
- 15 Fixation de la capote
- 15 Fixation de la barre de retenue
- 16 Fixation de l'adaptateur de siège-auto
- 16 Règlage du repose-pied
- 16 Utilisation de votre harnais
- 17 Fonctionnement du frein
- 17 Règlage du dossier
- 17 Règlage de la position du guidon
- 18 Inversion du guidon
- 18 Fixation du porte-gobelet
- 19 Installation d'une la couverture
- 19 Pliage de la poussette
- 20 Diagramme de la poussette

CONTENTUS DE LA BOITE



ROUE (4)



DÉTENTEUR DE TASSE



BARRE DE PROTECTION



LA COUVERTURE



CHASSIS




CAPOTE

OUVERTURE DE LA POUSSETTE

Dégager le clip de verrouillage gris [1].

Tirer le guidon vers le haut et écarter les pieds avant vers l'avant jusqu'à ce que les deux côtés s'enclenchent [2].

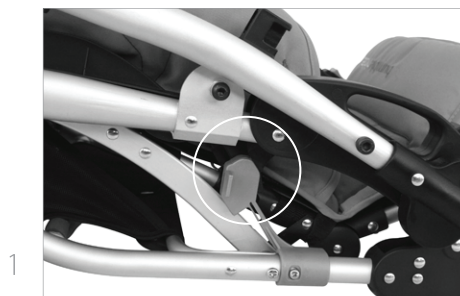

MONTAGE DES ROUES

Glisser chaque roue sur chaque pied de la poussette jusqu'à ce qu'elle s'enclenche [3].

VERROUILLAGE DES ROUES

Appuyer sur la barre de verrouillage pour s'assurer que chaque jeu de roues est verrouillé [4].
Pour déverrouiller, soulever simplement la barre de verrouillage.



FIXATION DE LA CAPOTE

Insérer chaque extrémité de la capote dans les supports en plastique situés de chaque côté du cadre [6].
Fixer la capote à l'aide des boutons-pression. Pour l'ôter, appuyer sur les clips en plastique aux deux extrémités et tirer.



FIXATION DE LA BARRE DE RETENUE

Insérer la barre de retenue dans les supports en plastique de chaque côté du siège [7].
Pour l'ôter, appuyer sur les clips de chaque côté de la barre de retenue et tirer.



FIXATION DE L'ADAPTATEUR DE SIÈGE-AUTO

Ôter la barre de retenue et insérer la barre du siège auto. Le dos du siège auto doit se trouver contre la barre de l'adaptateur [1]. Connecter la ceinture de sécurité à chaque anneau en D des deux côtés du harnais de siège [2].

AVERTISSEMENT : Certains sièges-autos ne sont pas compatibles avec cette poussette. Pour vérifier si votre siège-auto est compatible avec cette poussette, l'installer sans y mettre l'enfant.

Toujours veiller à ce que la ceinture de retenue secondaire soit bien fixée au-dessus du siège-auto avant utilisation.



1



2

RÉGLAGE DU REPOSE-PIED

Pour monter le repose-pied, le tirer simplement vers le haut jusqu'à la position souhaitée [3].

Pour abaisser le repose-pied, tirer simultanément sur les leviers correspondants sous le repose-pied.

UTILISATION DE VOTRE HARNAIS

Insérer les parties A et B de la boucle sur les côtés de la partie centrale C jusqu'à ce qu'elles s'enclenchent bien.


Régler soigneusement les sangles du harnais pour qu'elles soient très ajustées à l'aide des boucles de tension situées sur toutes les bretelles, les sangles abdominales et la sangle d'entrejambes.

Ouvrir les boucles en appuyant simultanément sur les griffes supérieures et inférieures et en tirant.

AVERTISSEMENT : Éviter les blessures graves liées aux chutes ou glissements. Toujours boucler la ceinture.



3

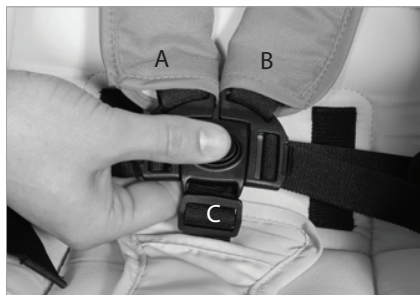

4

FONCTIONNEMENT DU FREIN

Engager les freins en appuyant sur les leviers de frein à l'aide du pied. Vérifier qu'ils sont correctement enclenchés [1].

Veiller à ce que le frein soit engagé lorsque la poussette n'est pas tenue.

Désengager en relevant les leviers à l'aide du pied.



1

RÉGLAGE DU DOSSIER

Pour abaisser le dossier, tirer sur le levier situé à l'arrière du dossier jusqu'à la position souhaitée [2].

Pour relever le dossier, le pousser simplement vers le haut.



2

RÉGLAGE DE LA POSITION DU GUIDON

Appuyer sur les boutons situés de chaque côté du guidon pour le mettre dans la position souhaitée.



3

INVERSION DU GUIDON

Tirer les poignées deux côtés vers le haut et pousser le guidon dans la direction opposée jusqu'à ce qu'il s'enclenche.



FIXATION DU PORTE-GOBELET

Repérez un petit bouton rond en acier sur le côté droit de la poignée de la poussette.

Pressez fermement le porte-gobelet en plastique contre ce bouton et tirez vers le bas de façon à ce que le porte-gobelet s'enclenche.



INSTALLATION D'UNE LA COUVERTURE

Commencer en dépliant la couverture et couvrir votre Bumberide. Tirer le rabat supérieur par la poignée. Il y a des attachements de Velcro de côté et d'autre. Connecter les attachements des rabats aux attachements sur les murs latéraux. Obtenir les boucles de Velcro au devant du châssis.



PLIAGE DE LA POUSSETTE

Engager le frein à pied arrière. Abaisser entièrement le dossier.

Veiller à ce que la roue avant soit en position pivotante déverrouillée. Relever le guidon s'il est abaissé. Saisir les deux poignées et appuyer sur les deux boutons gris pour déverrouiller.

Plier la poussette vers le sol [1].

Veiller à ce que le système de verrouillage soit enclenché [2].



AVERTISSEMENT : Les bébés peuvent glisser dans l'ouverture pour les jambes et se blesser.

AVERTISSEMENT : Ne jamais utiliser en position allongée sans avoir fixé au préalable le PROTÈGE-PIED ou avoir redressé complètement le repose-pied.

DIAGRAMME DE LA POUSSETTE



Warranty Card You may also register online, www.bumblerride.com.

Name _____

Address _____

Phone _____ E-mail _____

Retailer/Website _____

Stroller Model/Color _____ Date of Purchase _____

Serial Number _____

Why did you choose Bumbleride? _____

Please attach proof of purchase



IMPORTANT SAFETY INSTRUCTIONS

When using this stroller, basic precautions should always be followed. Please note the following:

READ ALL INSTRUCTIONS BEFORE USING THIS STROLLER.

WHEN ASSEMBLING THIS STROLLER, ENSURE CHILDREN ARE A SAFE DISTANCE AWAY.

SAVE THIS OPERATING MANUAL

Keep this manual available for future reference.

WARNINGS

- 1 Care must be taken when folding and unfolding the stroller to prevent finger entrapment.
- 2 To avoid infant falling or sliding out, always attach the footmuff and/or raise the footrest.
- 3 Always use the safety harness and never leave children unattended while seated in stroller.
- 4 Engage the rear foot brake when not holding your stroller.
- 5 When folding your stroller or making any adjustments, make sure your children are clear of moving parts.
- 6 Never allow more than one child in the stroller.
- 7 Never leave children in the stroller when using stairs or escalators.
- 8 Never overload the stroller. The stroller will become unstable if the manufacturer's recommended load is exceeded.
- 9 This stroller should open and close easily. Do not force it. Please read operating instructions before operating the fold of this stroller.
- 10 Do not leave stroller exposed to heat for long periods of time.
- 11 Do not fold your stroller when it is wet.
- 12 Parcels and/or accessory items placed in the unit may cause the unit to become unstable.
- 13 Unstable and/or hazardous conditions may exist if accessories/attachments other than those manufactured by Bumbleride are added to this stroller.
- 14 Do not hang shopping bags from the handle as this may affect the stroller's stability. Always use the lower basket provided. The maximum weight capacity of the basket is 12 lbs.

MAINTENANCE

This stroller requires regular maintenance. Regularly check for loose rivets, loose screws and/or broken parts, etc. Check all safety devices and brakes to ensure all are functioning properly.

Clean and lubricate the stroller frame and moving parts.

The removable seat fabric can be machine-washed using cold water. The canopy fabric can be spot cleaned. DO NOT machine-dry the fabric.

The weight capacity of this stroller is 45 lbs.

As part of continuous product development, Bumbleride reserves the right to make design changes without notice or obligation.